

How to upgrade my drive?


This manual shows you how to upgrade your drive with the Philips ReWriter Upgrade tool for the 4991, 4992, 6001 and 6002.

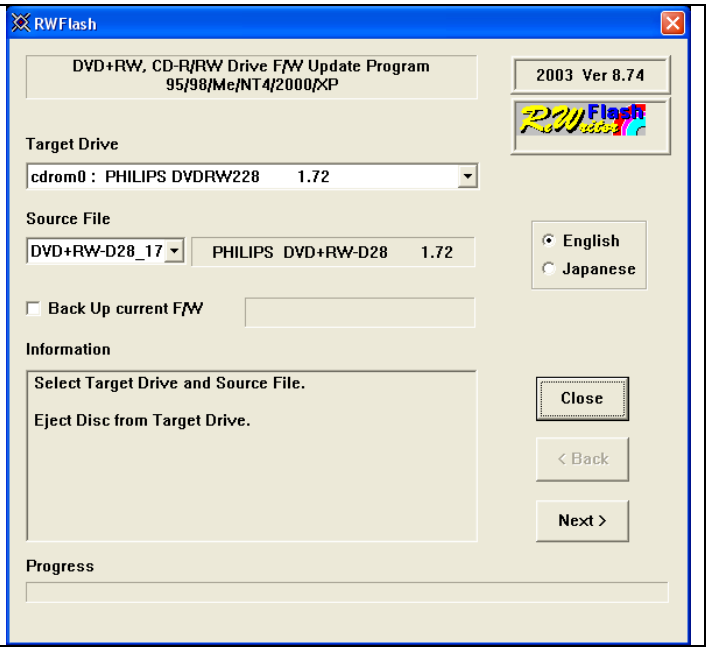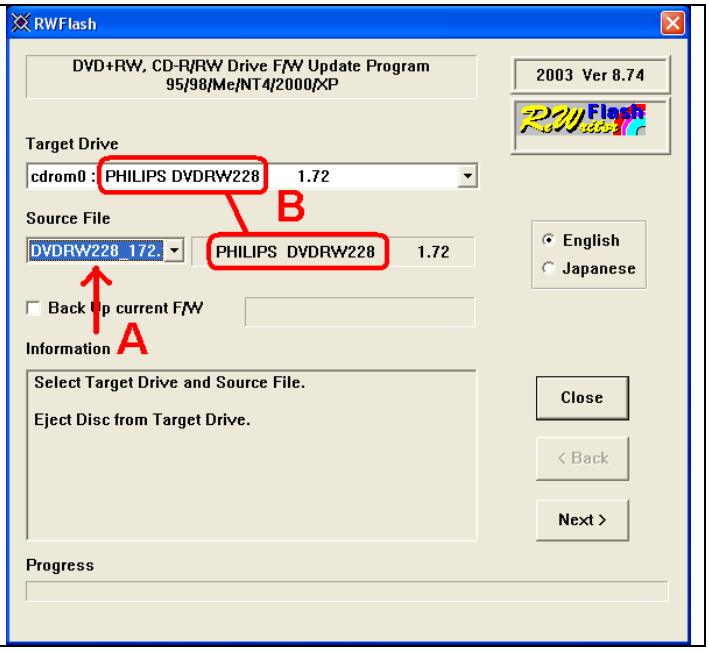

Philips Consumer Electronics
Version 04

PHILIPS

1 Start the Upgrade Tool you downloaded.	
2 Choose the source file at (A) so that the two circled areas (B) indicate the same drive name.	

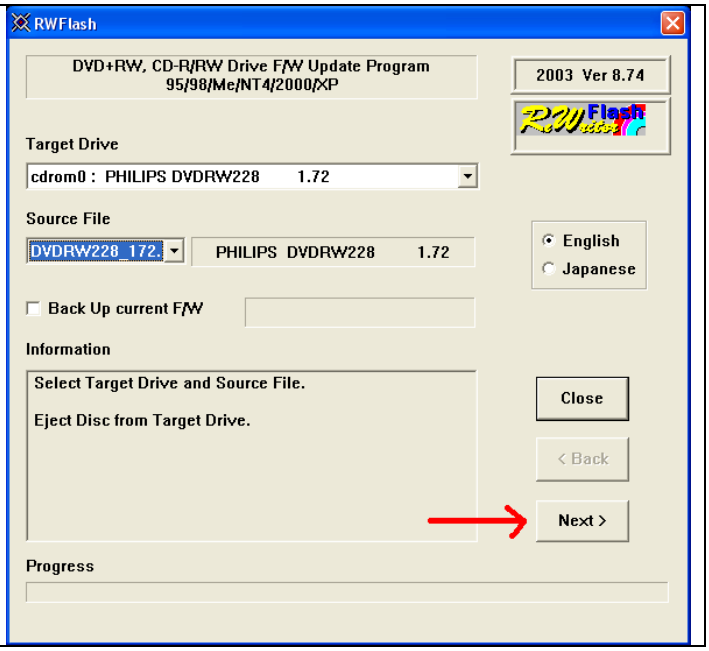3	Click “Next” and “Start”.	
4	Your drive has been upgraded. Please reboot your system.	